




Passenger's Window Motor Test

1. Remove the door panel.
 - 2-door (see page 20-9)
 - 4-door (see page 20-10)
2. Disconnect the 2P connector (A) from the passenger's power window motor.

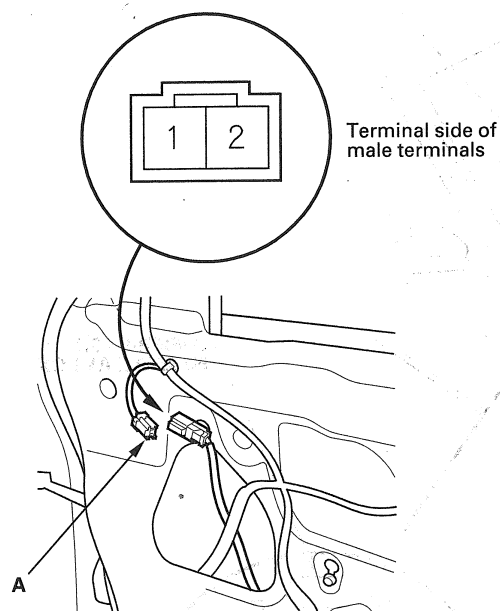

3. Test the motor in each direction by connecting battery power and ground according to the table. When the motor stops running, disconnect one lead immediately.

Terminal Direction	1	2
UP	⊕	⊖
DOWN	⊖	⊕

4. If the motor does not run or fails to run smoothly, replace it.