



Mirrors**Mirror Holder Replacement - Folding Type
Manual Mirror****20-
35****Mirror Holder Replacement – Fixed Type Power
Mirror/Manual Mirror**

1. Pry the mirror holder (A) out from the bottom until you can see the pivot (B) of the actuator, then detach the pivot using a flat tip screwdriver.

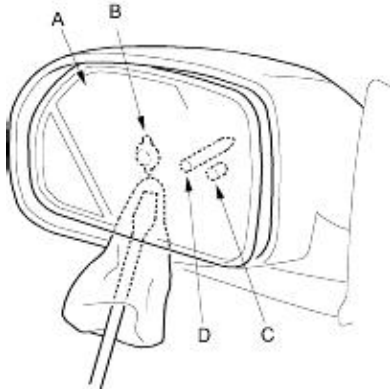

2. Detach the joint pin (C) and stopper pin (D), then remove the mirror holder. If equipped, disconnect the mirror defogger connector.
3. Grease the pivot, joint pin and stopper pin.
4. If equipped, reconnect the mirror defogger connector.
5. Reattach the mirror holder to the pivot, joint pin and stopper pin, then carefully push the pivot, joint pin and stopper pin portions of the mirror holder until the mirror holder locks into place. If necessary, before installing the mirror holder, heat the pivot, joint pin and stopper pin joint portions of the mirror holder.
6. Check the operation of the actuator.

1. Carefully pull out the bottom edge of the mirror holder (A) by hand. Take care not to scratch the mirror.

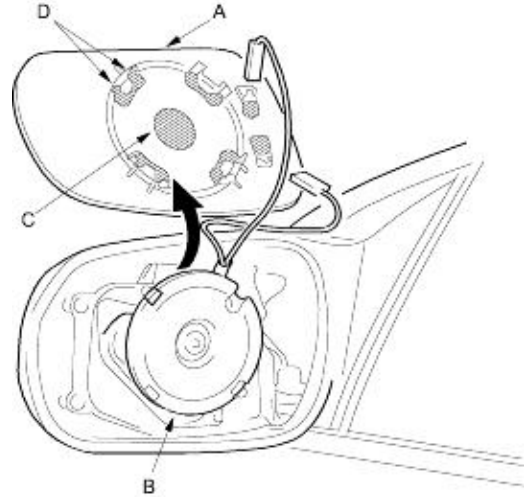

2. Separate the mirror holder from the actuator (B) by slowly pulling them apart while removing the adhesive (C), and detaching the clips (D).
3. Reattach the clips of the mirror holder to the actuator, then position the mirror holder on the actuator. Carefully push on the clip portions of the mirror holder until the mirror holder locks into place.
4. Check the operation of the actuator.