



Headliner Removal/Installation

Special Tools Required
KTC trim tool set SOJATP2014

NOTE:

- Use the appropriate tool from the KTC trim tool set to avoid damage when prying components.
- When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.
- Take care not to bend and scratch the headliner.
- Be careful not to damage the dashboard and other interior trim.

1. Remove these items:


- A-pillar trim, both sides, 2-door (see page 20-83), 4-door (see page 20-84)
- B-pillar upper trim, one side, 2-door (see page 20-83)
- B-pillar upper trim, both sides, 4-door (see page 20-84)
- C-pillar trim, both sides, 2-door (see page 20-85)
- Rearview mirror (see page 20-41)
- Ceiling light/spotlights, with moonroof (see page 22-132)
- Spotlights, without moonroof (see page 22-133)
- Ceiling light (see page 22-133)

2. Remove the sunvisor (A) and holder (B) from both sides.

- 1 Remove the caps (C).
- 2 Remove the self-tapping ET screws.
- 3 Remove the sunvisor from the body and holder.
- 4 Using a flat-tip screwdriver, push the hook (D), and turn the holder 90°, then pull it out.

Fastener Locations


► : Screw, 4

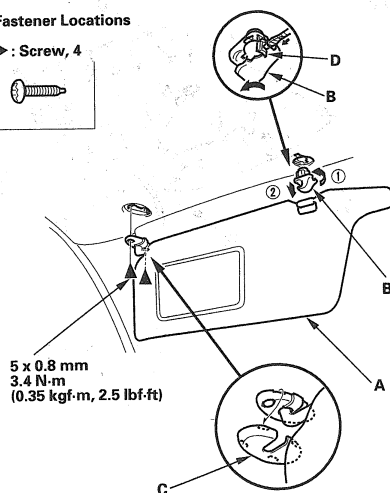


3. Lower the grab handle, then remove the caps (A). Remove the self-tapping ET screws, then remove the grab handle (B). 4-door: Remove the remaining grab handles.

Fastener Locations

► : Screw, 6

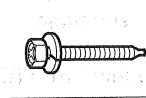



5 x 0.8 mm
3.4 N-m (0.35 kgf-m,
2.5 lbf-ft)

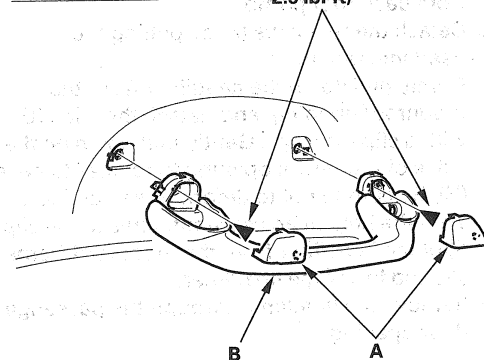

4. 2-door: From the rear driver's side, remove the screw, then remove the coat hanger (A).

Fastener Location

► : Screw, 1

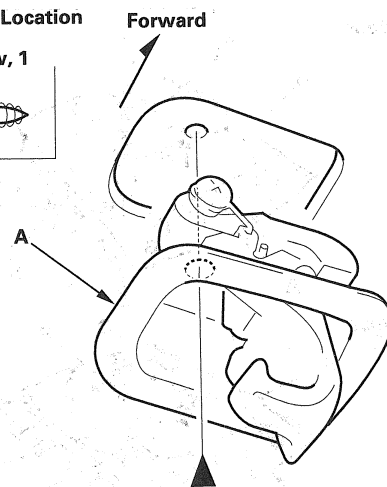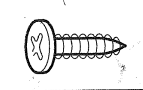

(cont'd)

Interior Trim

Headliner Removal/Installation (cont'd)


5. With moonroof: Remove the headliner (A).
 - 1 Remove the socket plug (B).
 - 2 2-door: Remove the upper portion of the B-pillar upper trim (C) from one side (see page 20-83).
 - 3 4-door: Remove the upper portion of the C-pillar trim (D) from each side (see page 20-86).
 - 4 Remove the remaining door opening trim (E) from each roof portion.
 - 5 Detach the rear clips (F) by pulling the headliner down.
 - 6 Gently pull down the headliner from the moonroof opening, and detach the clips (G) with a clip remover. Gently pull down on the sides of moonroof opening to release fasteners (H). Be careful not to deform the headliner.
 - 7 With the help of an assistant, release the clips (I) of the headliner from the moonroof frame (J), and lower the headliner.
 - 8 Remove the headliner through the passenger's door opening.

Fastener Locations


F ▷ : Clip, 2 G ▷ : Clip, 3 I ▷ : Clip, 2



2-door

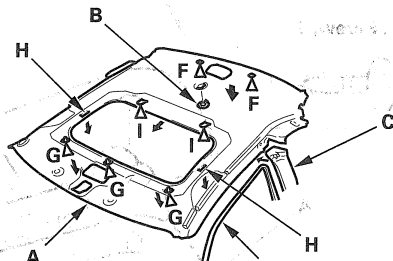

4-door

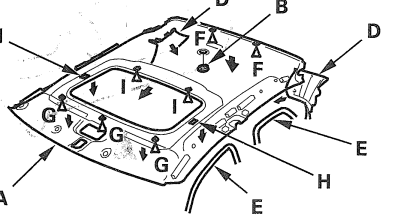

6. Without moonroof: Remove the headliner (A).
 - 1 2-door: Remove the upper portion of the B-pillar upper trim (B) from one side (see page 20-83).
 - 2 4-door: Remove the upper portion of the C-pillar trim (C) from each side (see page 20-86).
 - 3 Remove the remaining door opening trim (D) from each roof portion.
 - 4 Detach the rear clips (E) by pulling the headliner down.
 - 5 With the help of an assistant, lower the headliner.
 - 6 Remove the cushion tape or glue (F), then remove the roof harness (G) from the headliner.
 - 7 Remove the headliner through the passenger's door opening.


Fastener Locations

E ▷ : Clip, 2


F ▷ : Cushion tape (P/N 91902-SB2-003) or glue (2-door), 5 or 3

F ▷ : Cushion tape (P/N 91902-SB2-003) (4-door), 6

2-door

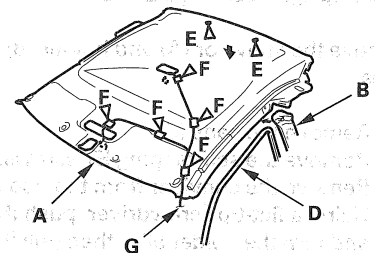

4-door

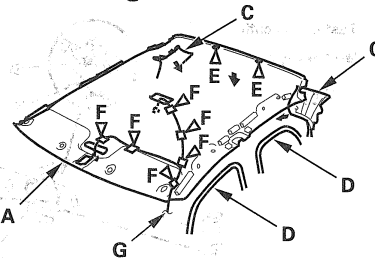





Carpet Replacement

7. If necessary, remove the bolts, then remove the grab handle bracket (A). 4-door: Remove the remaining grab handle brackets, if necessary.

Fastener Locations

 ▶ : Bolt, 6

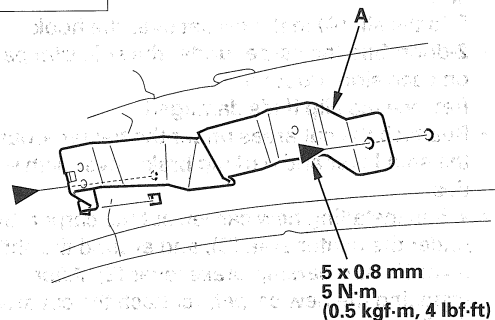

8. Install the headliner in the reverse order of removal, and note these items:

- When reinstalling the headliner through the door opening, be careful not to fold or bend it. Also, be careful not to scratch the body.
- If the threads on a visor or grab handle screws are worn out, use an oversized selftapping ET screw (P/N 90137-S0A-003) made specifically for this application.
- Check that both sides of the headliner are securely attached to the trim.
- Replace any clips that remain in the roof during removal. Reinstall the clips back in the headliner before installation.

SRS components are located in this area. Review the SRS component locations (see page 23-15) and the precautions and procedures (see page 23-16) before performing repairs or service.

NOTE:

- Put on gloves to protect your hands.
- Take care not to damage, wrinkle or twist the carpet.
- Be careful not to damage the dashboard or other interior trim pieces.



1. Remove these items:

- Front seats, both sides (see page 20-109)
- Rear seat cushion, 2-door (see page 20-118), 4-door (see page 20-119)
- Rear seat side bolsters, both sides, 4-door (see page 20-119)
- Kick panels, both sides, 2-door (see page 20-83), 4-door (see page 20-84)
- Door sill trim, both sides, 2-door (see page 20-83)
- Front door sill trim, both sides, 4-door (see page 20-84)
- Seat side trim, both sides, 4-door (see page 20-84)
- Center console, without console armrest (see page 20-93), with console armrest (see page 20-94)
- Driver's dashboard under cover (see page 20-98)
- Passenger's dashboard lower cover (see page 20-101)

2. Remove the nut (A), and using a 6 mm hex wrench, release the clip (B), then remove the footrest (C).

Fastener Locations

A ● : Nut, 1 B ▷ : Clip, 1

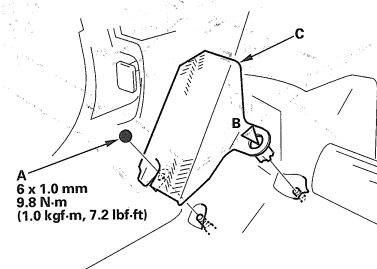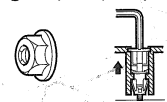

(cont'd)