


# Keyless/Power Door Lock System

## Door Lock Knob Switch Test

### 4-door


1. Remove the driver's door panel (see page 20-10).
2. Disconnect the 3P connector from the actuator.

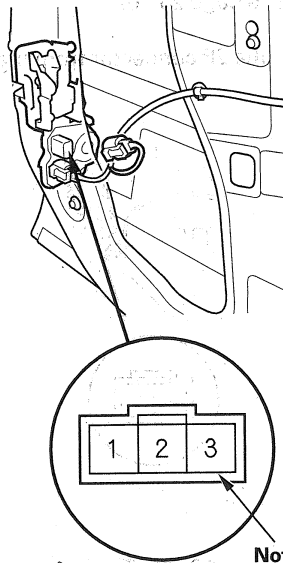

3. Check for continuity between the No. 1 and No. 2 terminals.
  - There should be continuity when the door lock knob switch is in the LOCKED position.
  - There should be no continuity when the door lock knob switch is in the UNLOCKED position.
4. If the continuity is not as specified, replace the door lock actuator.

### 2-door

1. Remove the driver's door panel (see page 20-9).
2. Disconnect the 3P connector from the actuator.

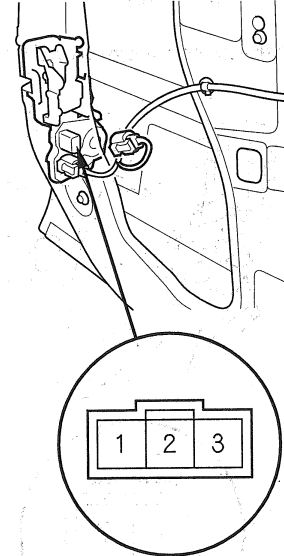

3. Check for continuity between the No. 1 and No. 2 terminals.
  - There should be continuity when the door lock knob switch is in the LOCKED position.
  - There should be no continuity when the door lock knob switch is in the UNLOCKED position.
4. Check for continuity between the No. 1 and No. 3 terminals.
  - There should be continuity when the door lock knob switch is in the UNLOCKED position.
  - There should be no continuity when the door lock knob switch is in the LOCKED position.
5. If the continuity is not as specified, replace the door lock actuator.