




Combination Light Switch Test/Replacement

1. Remove the dashboard lower cover (see page 20-97).
2. Remove the steering column covers (see page 17-27).
3. Disconnect the 16P connector (A) from the combination light switch (B).

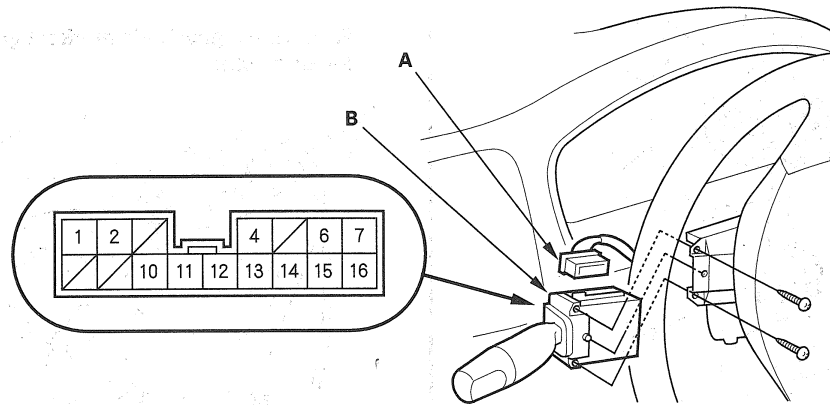

4. Remove the two screws, then slide out the combination light switch.
5. Inspect the connector terminals to be sure they are all making good contact.
 - If the terminals are bent, loose or corroded, repair them as necessary, and recheck the system.
 - If the terminals look OK, check for continuity between the terminals in each switch position according to the tables.

Light switch:

Terminal		4	6	7	12	13	
Headlight switch	OFF		○		○		
	EXE				○	○	
	≡D	LOW		○	○	○	○
		HIGH	○		○	○	○
Passing switch	OFF			○	○	○	
	ON	○			○	○	

Turn signal switch:

Terminal	2	10	11
Position			
LEFT	○	○	
NEUTRAL			
RIGHT		○	○

5. If the continuity is not as specified, replace the switch.