


Radiator and Fan Replacement

1. Drain the engine coolant (see page 10-8).
2. Remove the front bumper (see page 20-126).
3. Remove the hood latch (see page 20-155).
4. Remove the upper and lower radiator hoses, and automatic transmission fluid (ATF) cooler hoses.

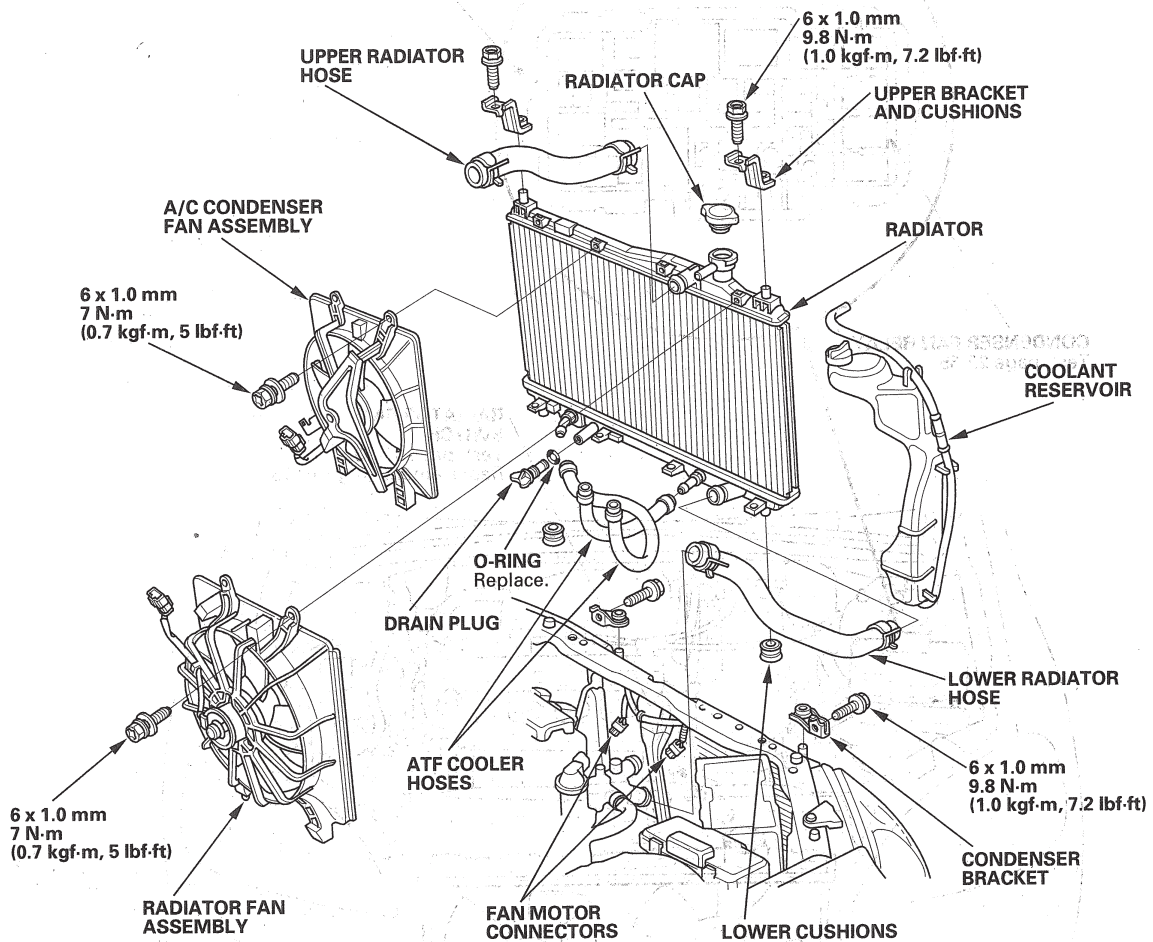

5. Disconnect the fan motor connectors and compressor clutch connector.
6. Remove the radiator upper brackets, then pull up the radiator.
7. Remove the fan shroud assemblies and other parts from the radiator.
8. Install the radiator in the reverse order of removal. Make sure the upper and lower cushions are set securely.
9. Fill the radiator with engine coolant, then bleed air from the cooling system (see step 10 on page 10-9).
10. Clean up any spilled engine coolant.