# 2005 Honda Civic LX

## Fig. 5: Identifying Under-Hood Fuse/Relay Box Components

## Courtesy of AMERICAN HONDA MOTOR CO., INC.

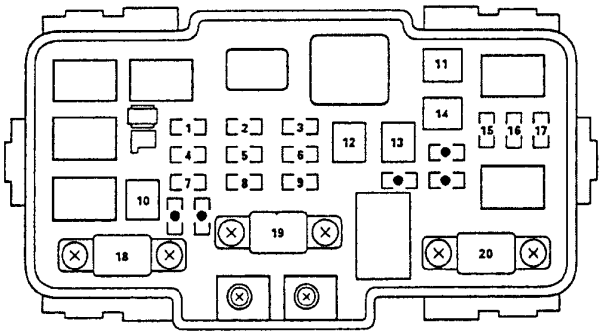


●: Spare fuse

| Fuse Number | Fuse Name | Amps | Component or Circuit Protected |
|---|---|---|---|
| 1 | CONDENSER FAN | 20A | A/C condenser fan motor, A/C compressor clutch relay |
| 2 | IMA | 10A | MCM relay 2 |
| 3 | SMALL LIGHT | 10A | Ceiling light, Ignition key switch/Key light, Spotlights, Tallight relay, Trunk light |
| 4 | COOLING FAN | 20A | Radiator fan relay |
| 5 | HAZARD | 10A | Hazard warning switch |
| 6 | FI ECU | 15A | PGM-FI main relay 1 |
| 7 | HORN, STOP | 15A | Brake pedal position switch, Horn relay |
| 8 | ABS F/S | 20A | ABS modulator-control unit |
| 9 | BACK UP | 10A | Audio unit, DLC, CarLink interface box, Gauge assembly, Immobilizer control unit-receiver, Keyless receiver unit, MCM, Multiplex control unit, TCM (CVT) |
| 10 | ABS MOTOR | 40A | ABS modulator-control unit |
| 11 | RR DEFROSTER | 30A | Rear window defogger relay |
| 12 | HEATER MOTOR | 40A | Blower motor relay |
| 13 | POWER WINDOW | 40A | No. 7 fuse (in the under-dash fuse/relay box), Power window relay |
| 14 | OPTION | 40A | Hot restart fan relay, No. 60 fuse (in the multi-fuse/relay box), No. 2, 3, 5, 15 and 16 fuses (in the under-dash fuse/relay box) |
| 15 ('03) | L HEAD LIGHT | 15A | DRL control unit (Canada), DRL relay (Canada), Gauge assembly, Left headlight |
| 15 ('04) | L HEAD LIGHT | 20A | DRL control unit (Canada), DRL diode (Canada), Gauge assembly (USA), Left headlight |
| 16 | DOOR LOCK | 20A | Multiplex control unit |
| 17 ('03) | R HEAD LIGHT | 15A | DRL relay (Canada), Right headlight |
| 17 ('04) | R HEAD LIGHT | 20A | DRL control unit, Right headlight |
| 18 | EPS | 60A | EPS control unit |
| 19 | BATTERY | 80A | Battery, Power distribution |
| 20 | IG1 | 50A | Ignition switch (BAT) |

G00306517

© 2006 Mitchell Repair Information Co., LLC.