


Third Step:
Now connect the wires into the DPDT Switch (Used so that you can switch between audio input from the ipod or from the cd player.) Remember, the cables running from the blue adapter go into the center leads on the switch, and the others leads on the sides of the switch will be coupled to the cables on the ipod and the cd player.

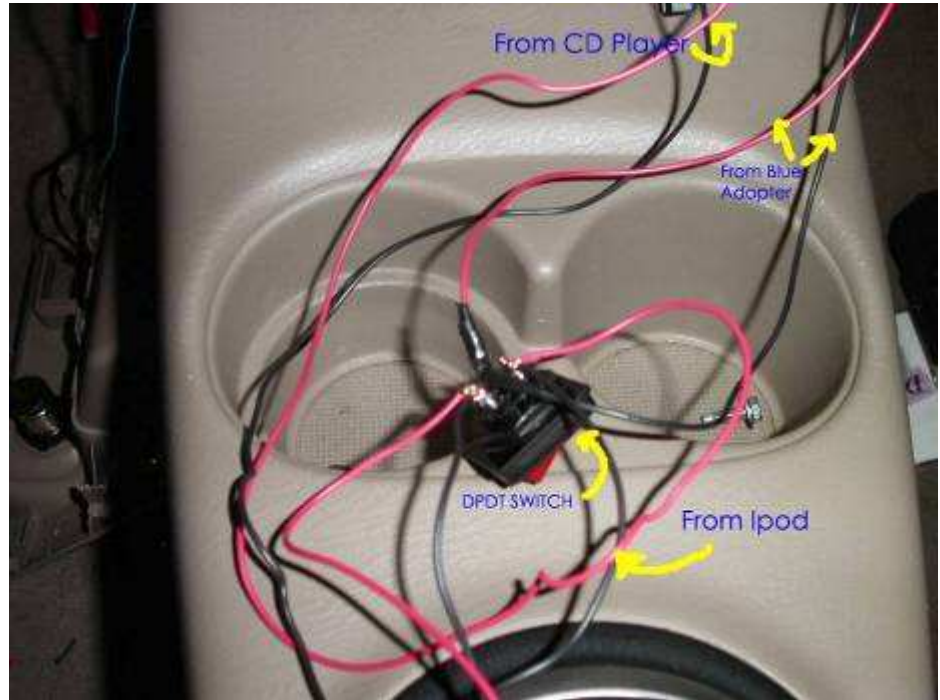

Fourth Step:
I know there's gotta be a better way of doing this but I didn't know how to do it. I literally connected the left and right channels from an old Sony Y-cable I had around to a pair of cables and hooked those up into the switch. I just inserted the cables on the inside and wrapped it around with tape. Hey it worked and sounds great but I had to fiddle around with the cable a little until I got the sound right.

